
SKLZ» LAUNCH PAD

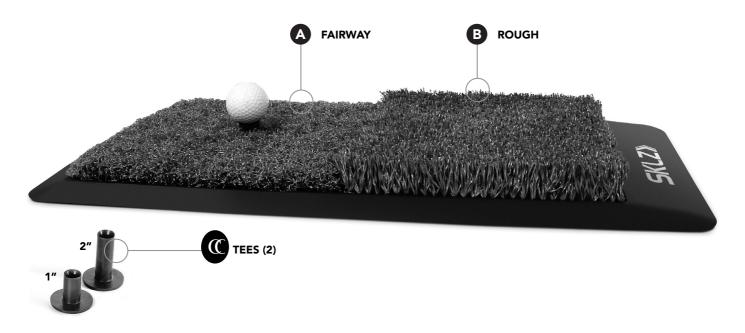

INSTRUCTION MANUAL

» Launch Pad » Tees (2)

Thank you for choosing SKLZ Launch Pad. We are dedicated to providing you with the best tools and instruction possible to help you unleash your athletic potential. If there is anything else we can do to help you optimize your workouts, don't hesitate to send us an email (customerservice@sklz.com) or give us a call (1-877-225-7275).

BEFORE YOU BEGIN:

- » Read all setup and usage instructions carefully.
- » This product is not suitable for children under 3 years of age.
- » Always check equipment for wear or damage before use. If any is found, do not use the product. If any components are missing, please contact SKLZ toll free at 1-877-225-7275 x128.

ACAUTION:

- » When using the Launch Pad, please have others stay clear of the hitting area to reduce risk of injury.
- » When using the Launch Pad with a net, position the Launch Pad far enough away allowing the golfer to swing freely, while still being close enough to ensure the net will capture a hit ball.
- » Do not store in extremely high or low temperatures to avoid damaging or reducing the life of the product.
- » Do not leave Launch Pad outdoors for extended periods of time.

VISIT SKLZ.COM FOR ADDITIONAL TRAINING EQUIPMENT



SET-UP

TEE USE:

Depending on the club, insert either tee used into the Launch Pad hole through the bottom of the mat.

CLUB USE RECOMMENDATIONS:

DRIVER: Use tall tee on the fairway

FAIRWAY WOOD | HYBRID CLUBS | IRONS

- 1. Use short tee or
- 2. On the fairway or rough without tee

WEDGES: Use on the fairway or rough without tee

PERFECT FOR PRACTICE WITH:

QUICKSTER®

ULTRA-PORTABLE QUICK SET UP GOLF NET

AVAILABLE IN: 8' x 8'

6' x 6'



- » Removable full swing and chipping target
- » Sturdy and stable for all players
- » Ultra-durable design for high-intensity practice
- » Lightweight, easy to pack, carry and store